

Cleaning and Storage:

- Disassemble harness completely by pressing down on attachment tabs to separate it from the silicone section, and undo the snaps to remove the elastic waistband.
- Clean each piece according to individual instructions:

Elastic Waistband: Hand wash with mild soap and warm water and lay flat to dry.

Silicone Vibrating Harness: Spray with Doc Johnson® Toy Cleaner or wash with mild soap and warm water. Do not submerge.

Hollow Silicone Attachment: Spray with Doc Johnson® Toy Cleaner, wash with mild soap and warm water, boil for 5–10 minutes, or clean in top rack of dishwasher.

Allow each piece to air-dry completely before storing separately from other toys in a cool, dry place. Use with water-based lubricant/glide. Doc Johnson® Toy Cleaner sold separately.

Do not attempt to warm this product in a microwave or conventional oven.
Warning for Vibrating Products: To avoid injury or aggravation of pre-existing conditions, this product should not be used on swollen or inflamed areas or skin lacerations.
No medical claims are warranted or implied by the use of this product.

Copyright © 2018, Doc Johnson Enterprises. All Rights Reserved.
docjohnson.com
INS-0801-00

DOCJOHNSON®



body extensions™


hollow silicone strap-on set
with rechargeable vibrating
harness

Care and Usage Instructions

Body Extensions™ Hollow Strap-On System by Doc Johnson® is a collection of harnesses and hollow silicone attachments designed to stimulate the body and allow penetration play.

To Assemble Product for Use:

- Make sure the tabs on the base of your silicone attachment are aligned to the notches in the silicone front piece of your harness.
- Place the attachment behind the silicone front piece and push the tip of the attachment through the large hole (for larger attachments, insert through front of harness).
- Press the attachment's tabs into the front piece's grooves until they push all the way through and lock in place.
- Use multiple snaps to adjust harness to your ideal fit.

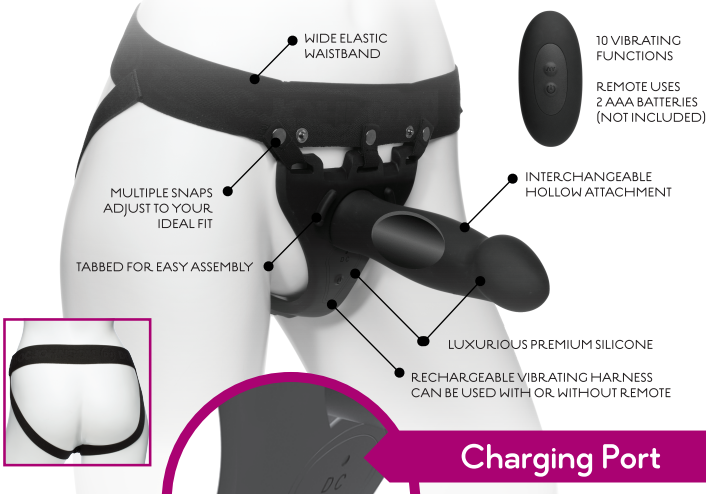

Charging Port



Use included USB cable and connect other end to a standard USB port to charge the internal battery.

Charge time: 60 minutes
Usage time: 50 minutes



Power Button

To Power Vibrations On:

On Silicone Harness:

- 1 Press and hold  until the LED button lights up.
- 2 Press  again to change vibration pattern.

On Wireless Remote:

- 3 After completing step 1, press  to power on wireless remote.
- 4 Press  to change vibration pattern.

- Product can be used with or without wireless remote.



To Power Vibrations Off:

On Wireless Remote:

Press  to power off vibrations TEMPORARILY.

On Silicone Harness:

Press and hold  to power off product AFTER USE.

- Make sure to power off both wireless remote and silicone harness after use.